


User module

# HTTP Login Banner

## APPLICATION NOTE

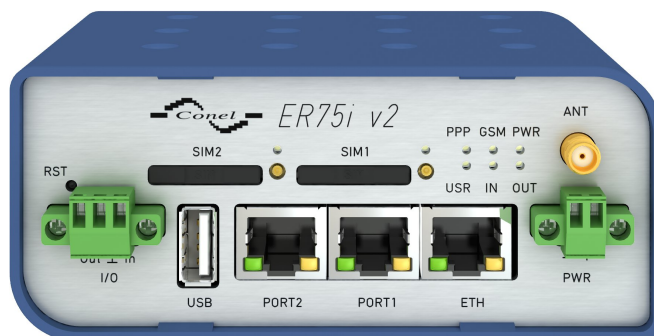

## Used symbols



*Danger* – important notice, which may have an influence on the user's safety or the function of the device.



*Attention* – notice on possible problems, which can arise in specific cases.



*Information, notice* – information, which contains useful advice or special interest.



Conel s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic  
Manual issued in CZ, October 8, 2014


# Contents

<b>1</b>	<b>Description of user module</b>	<b>1</b>
<b>2</b>	<b>Configuration</b>	<b>2</b>
<b>3</b>	<b>Recommended literature</b>	<b>3</b>

# List of Figures

1	Information banner . . . . .	1
2	Web interface . . . . .	2

# 1. Description of user module

 User module *HTTP Login Banner* is not contained in the standard router firmware. Uploading of this user module is described in the Configuration manual (see [1, 2]).



The user module is v2 and v3 router platforms compatible.

This module allows user to embed information banner ahead of the login form. Using this banner, it is possible to provide any information to user acceding to the router. Banner may serve as a notice describing the device or such as a warning of how to behave when configuring the router.


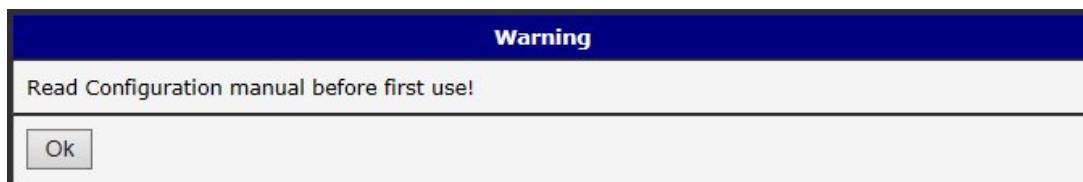


Figure 1: Information banner

For configuration *HTTP Login Banner* user module is available web interface, which is invoked by pressing the module name on the *User modules* page of the router web interface. The left part of the web interface (ie. menu) contains only the *Return* item, which switches this web interface to the interface of the router.

## 2. Configuration

The actual configuration of the *HTTP Login Banner* user module configuration is performed via the form on the right of the web interface. The first item in the configuration form – *Enable HTTP Login Banner* – is used to activate this user module. Then it is necessary to insert text which will be displayed in the information banner to the *Banner Text* window. All changes in settings will be applied after pressing the *Apply* button.

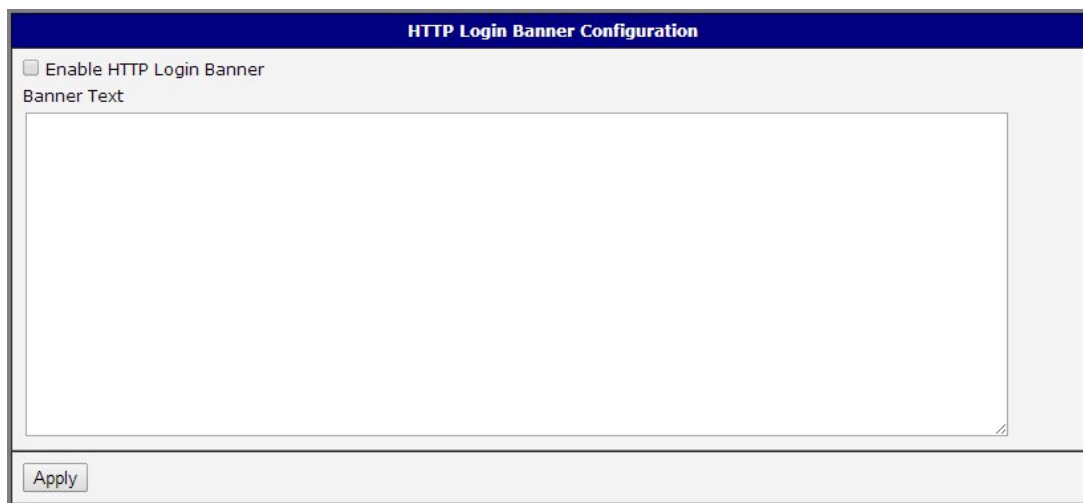

The screenshot shows a web interface titled "HTTP Login Banner Configuration". It features a checkbox labeled "Enable HTTP Login Banner". Below this is a text area labeled "Banner Text" with a large empty box for input. At the bottom left of the form is an "Apply" button.

Figure 2: Web interface



For displaying text correctly, it is not possible to use national characters!

# 3. Recommended literature

- [1] Conel: **Configuration manual for v2 routers**
- [2] Conel: **Configuration manual for v3 routers**