


# User module

# Loopback

## APPLICATION NOTE

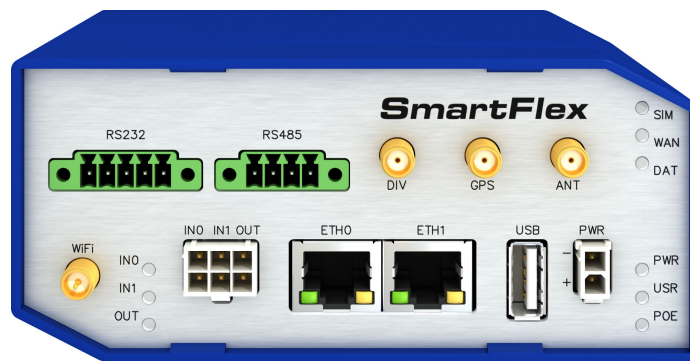

# ADIANTECH

## Used symbols



*Danger* – Information regarding user safety or potential damage to the router.



*Attention* – Problems that can arise in specific situations.



*Information, notice* – Useful tips or information of special interest.



*Example* – example of function, command or script.



Advantech B+B SmartWorx s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic.  
Document No. APP-0073-EN, revision from March 29, 2019. Released in the Czech Republic.

# Contents

<b>1</b>	<b>User Module Description</b>	<b>1</b>
1.1	Description of the module . . . . .	1
1.2	Web interface . . . . .	1
1.3	Configuration . . . . .	2
1.4	Configuration Example . . . . .	3
<b>2</b>	<b>Recommended Literature</b>	<b>4</b>

## List of Figures

1	Main menu . . . . .	1
2	Configuration page . . . . .	2
3	Configuration page . . . . .	3

## List of Tables

1	Configuration items description . . . . .	2
2	Configuration example items description . . . . .	3

# 1. User Module Description

## 1.1 Description of the module



This user module is not installed on *Advantech* routers by default. See *Configuration Manual* for the description how to upload an user module to the router. For more information see [1], [2], [3], [4] or [5], chapter *Customization* → *User Modules*.



This user module is compatible with *Advantech* routers of v2 and v3 platforms only.

*Loopback* user module can be used to create a virtual network interface for managing and configuring the device. With this interface, it is possible to assign such a device an address that can be accessed from the control device via the network. However, this address is not specific to the physical interface of the device.

## 1.2 Web interface

Once the installation of the module is complete, the module's GUI can be invoked by clicking the module name on the *User modules* page of router's web interface.

Left part of this GUI contains menu with *Configuration* menu section. *Customization* menu section contains only the *Return* item, which switches back from the module's web page to the router's web configuration pages. The main menu of module's GUI is shown on Figure 1.



Figure 1: Main menu

## 1.3 Configuration

Configuration of this user module can be done on *Global* page, under *Configuration* menu section. Configuration form is shown on Figure 2. It contains three main parts, for configuration of IP address, for configuration of permit address and for configuration of permit Mask. All configuration items for *Global* configuration page are described in table 1.

Figure 2: Configuration page

Item	Description
Enable loopback	If enabled, logging functionality of the module is turned on.
Address	You can assign this router 4 IP addresses to access from outside.
Permit Address	IP addresses of devices that are allowed to operate this device here. You can also enter a network address, but you must also enter Permit MASK.
Permit Mask	Enter the mask address here if you have entered a network address (not a device) in the Permit Address field. If you do not fill in the address and you have completed the network address in Permit Address, you will not be able to connect to the device.
Apply	Button to save and apply all changes made in this configuration form.

Table 1: Configuration items description

## 1.4 Configuration Example

Address	Permit Address *	Permit Mask *
192.168.1.10	192.168.1.5	
10.64.0.56	10.64.0.0	255.255.255.0

\* can be blank

Apply

Figure 3: Configuration page

Item	Description
Enable loopback	Enabled, logging functionality of the module is turned on.
Address	It is also possible to connect to this device via these IP addresses: 192.168.1.10, 10.64.0.56.
Permit Address	Only the device with the IP address 192.168.1.5 can be connected to the assigned IP address 192.168.1.10. All devices from the 10.64.0.0/24 network can access devices with an IP address of 10.64.30.56.
Permit Mask	Enter the mask address here if you have entered a network address (not a device) in the Permit Address field. If you do not fill in the address and you have completed the network address in Permit Address, you will not be able to connect to the device.

Table 2: Configuration example items description

## 2. Recommended Literature

- [1] Advantech B+B SmartWorx: **v2 Routers – Configuration Manual**
- [2] Advantech B+B SmartWorx: **SmartFlex – Configuration Manual**
- [3] Advantech B+B SmartWorx: **SmartMotion – Configuration Manual**
- [4] Advantech B+B SmartWorx: **SmartStart – Configuration Manual**
- [5] Advantech B+B SmartWorx: **ICR-3200 – Configuration Manual**



Product related documents and applications can be obtained on *Engineering Portal* at <http://ep.advantech-bb.cz/> address.