


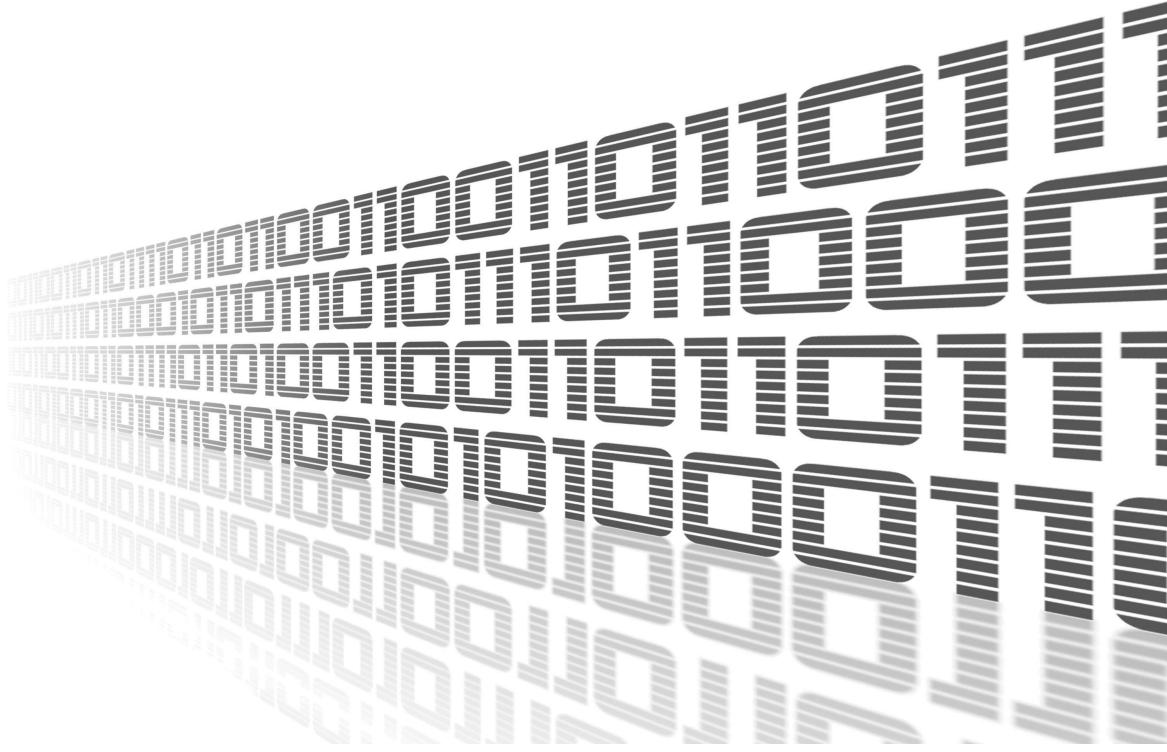

User Module

IS-IS

APPLICATION NOTE



www.lucom.de

ADVANTECH

Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that may arise in specific situations.

 *Information or notice* – Useful tips or information of special interest.

 *Example* – example of function, command or script.



Advantech Czech s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic

Document No. APP-0055-EN, revised on June 18, 2020. Released in the Czech Republic.

Contents

| | |
|--|----------|
| 1 Description of user module | 1 |
| 1.1 Example of configuration | 3 |
| 2 Basic commands | 5 |
| 3 Related Documents | 7 |

List of Figures

| | | |
|---|-----------------------------------|---|
| 1 | Choice of web interface | 1 |
| 2 | ZEBRA web interface | 2 |
| 3 | IS-IS web interface | 2 |

List of Tables

| | | |
|---|--------------------------|---|
| 1 | Basic commands | 6 |
|---|--------------------------|---|

1. Description of user module



User module *IS-IS* is not contained in the standard router firmware. Uploading of this user module is described in the Configuration manual (see [1, 2]).



The user module is v2 and v3 router platforms compatible.

This module allows Advantech router to use IS-IS (Intermediate System – Intermediate System) routing protocol, which is designed for the exchange of routing information between routers. This protocol belongs to a family of IGP (Interior Gateway Protocol) protocols, which are designed to distribute routing information within a single autonomous system (AS). It is a link-state protocol, which means that information about the topology is exchanged between the nearest neighbours in a "flood way" (flooding). Therefore all routers have information about the entire topology within an AS and typically use modified Dijkstra's algorithm for finding optimal routes. Selecting router based on knowledge of the entire topology allows to take into account different criteria useful for QoS (Quality of Service) or Traffic Engineering.

The IS-IS user module is based on software called Quagga. It is a routing software package that provides TCP/IP based routing services. The Quagga is composed of several deamons. The most important is the *zebra* deamon, which collects routing information, cooperates with the system core and adjusts its routing tables. The rest of deamons including the *isisd* deamon serves as an interface of the central deamon (*zebra*) for routing protocols. Each deamon has its own configuration file.

For configuration *isisd* and *zebra* deamons are available web interfaces, which are invoked by pressing the *IS-IS* or *ZEBRA* item on the *User modules* page of the router web interface. The left part of both web interfaces (ie. menu) contains only the *Return* item, which switches these web interfaces to the interface of the router. In the right part is always field for configuring corresponding daemon.

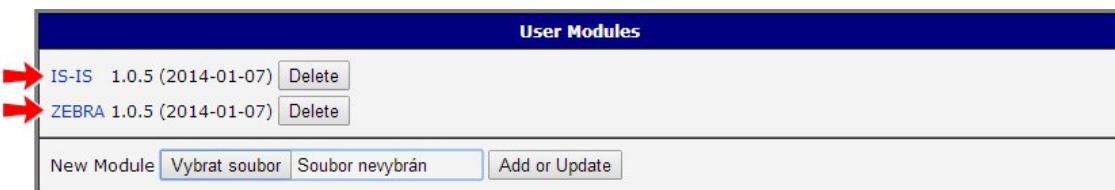


Figure 1: Choice of web interface



Figure 2: ZEBRA web interface



Figure 3: IS-IS web interface

Important notices:

- Using telnet is vty interface of zebra and isisd deamons available only via the loop-back interface 127.0.0.1.
- New configuration files should be created only by an experienced user!



1.1 Example of configuration

An example of the *isisd.conf* configuration file:

```
! -*- isis -*-
!
! ISISd sample configuration file
!
hostname isisd
password foo
enable password foo
log syslog
!
!
router isis DEAD
  net 47.0023.0000.0003.0300.0100.0102.0304.0506.00
  ! is-type level-1

  ! -- set the lifetime either for level-1, level-2 or both
  ! lsp-lifetime level-1 65535
  ! lsp-lifetime level-2 65535
  ! lsp-lifetime 65535

  ! hostname isisd-router
  ! area-password foobar
  ! domain-password foobar

interface eth0
  ip router isis DEAD
  ! isis hello-interval 5
  ! isis lsp-interval 1000

  ! -- optional
  ! isis circuit-type level-1
  ! isis password lalla level-1
  ! isis metric 1 level-1
  ! isis csnp-interval 5 level-1
  ! isis retransmit-interval 10
  ! isis retransmit-throttle-interval
  ! isis hello-multiplier 2 level-1
  ! isis priority 64
!
```

An example of the zebra configuration file (*zebra.conf*):

```
! -*- zebra -*-

!
! zebra sample configuration file
!
! $Id: IS-IS_EN.tex,v 1.3 2014/10/08 07:14:07 jan_svoboda Exp $
!

hostname Router
password zebra
enable password zebra
log syslog
!

! Interface's description.
!
!interface lo
! description test of desc.
!
!interface sit0
! multicast

!

! Static default route sample.
!
!ip route 0.0.0.0/0 203.181.89.241
!
```

2. Basic commands

The following table lists basic commands which can be used when editing *isisd.conf* file and description of these commands:

| Command | Description |
|----------------------------------|--|
| area-password | Configures the IS-IS area authentication password. To disable the password, use the "no form" of this command – <i>no area-password</i> . |
| default-information originate | Generates a default route into an IS-IS routing domain. To disable this feature, use the "no form" of this command. |
| domain-password | Configures the IS-IS routing domain authentication password. To disable a password, use the "no form" of this command. |
| ip router isis | Configures an IS-IS routing process for IP on an interface. To disable IS-IS for IP, use the "no form" of this command. |
| isis circuit-type | Configures the type of adjacency. To reset the circuit type to Level 1 and Level 2, use the "no form" of this command. |
| isis csnp-interval | Configures the IS-IS complete sequence number PDUs (CSNP) interval. To restore the default value, use the "no form" of this command. |
| isis hello-interval | Specifies the length of time between hello packets. To restore the default value, use the "no form" of this command. |
| isis hello-multiplier | Specifies the number of IS-IS hello packets a neighbor must miss before the router should declare the adjacency to be down. To restore the default value, use the "no form" of this command. |
| isis lsp-interval | Configures the time delay between successive IS-IS link state packet transmissions. To restore the default value, use the "no form" of this command. |
| isis metric | Configures the metric for an interface. To restore the default metric value, use the "no form" of this command. |
| isis password | Configures the authentication password for an interface. To disable authentication for IS-IS, use the "no form" of this command. |
| isis priority | Configures the priority of designated routers. To reset the default priority, use the "no form" of this command. |
| isis retransmit-interval | Configures the time between retransmission of each LSP (IS-IS link-state PDU) over point-to-point links. To restore the default value, use the "no form". |
| isis retransmit-throttleinterval | Configures the amount of time between retransmissions of any IS-IS link-state PDUs (LSPs) on a point-to-point interface. To restore the default value, use the "no form" of this command. |
| is-type | Configures the IS-IS level. To reset the default value, use the "no form". |
| lsp-refresh-interval | Sets the link-state packet (LSP) refresh interval. To restore the default refresh interval, use the "no form" of this command. |

Continued on next page

Continued from previous page

| Command | Description |
|--------------------|---|
| max-lsp-lifetime | Sets the maximum time that link-state packets (LSPs) can remain in a router's database without being refreshed. To restore the default lifetime, use the "no form" of this command. |
| net | Configures an IS-IS network entity title (NET) for the routing process. To remove a NET, use the "no form" of this command. |
| router isis | Enables the IS-IS routing protocol and to specify an IS-IS process. To disable IS-IS routing, use the "no form" of this command. |
| set-overload-bit | Configures the router to signal other routers not to use it as intermediate hop in their SPF calculations. To remove the designation, use the "no form". |
| show isis database | Displays the IS-IS link state database. |
| show isis lsp-log | Displays the Level 1 and Level 2 Intermediate System-to-Intermediate System (IS-IS) link-state packet (LSP) log of the interfaces that triggered the new LSP. |
| show isis spf-log | Displays how often and why the router has run a full SPF calculation. |

Table 1: Basic commands

3. Related Documents

- [1] Advantech Czech: **v2 Routers Configuration Manual** (MAN-0021-EN)
- [2] Advantech Czech: **SmartFlex Configuration Manual** (MAN-0023-EN)
- [3] Advantech Czech: **SmartMotion Configuration Manual** (MAN-0024-EN)
- [4] Advantech Czech: **SmartStart Configuration Manual** (MAN-0022-EN)
- [5] Advantech Czech: **ICR-3200 Configuration Manual** (MAN-0042-EN)



Product related documents can be obtained on *Engineering Portal* at www.ep.advantech-bb.cz address.